

MODEL 1601 HEATER KIT

DoorKing Part Number


1601-092

This kit is designed for the 1600 model barrier gate operators only. For climates where temperatures routinely drop below 40°F (4°C). An automatic thermostat will control temperature inside operator housing.

Kit Includes: Heater Assembly with black and white wires, 5 wire ties, 3 double stick wire tie mounts, 2 plastic wire restrainers and 2 nylon lock nuts.


Installation

- 1 Shut off AC power to operator. Turn off DC power switch on certain models.

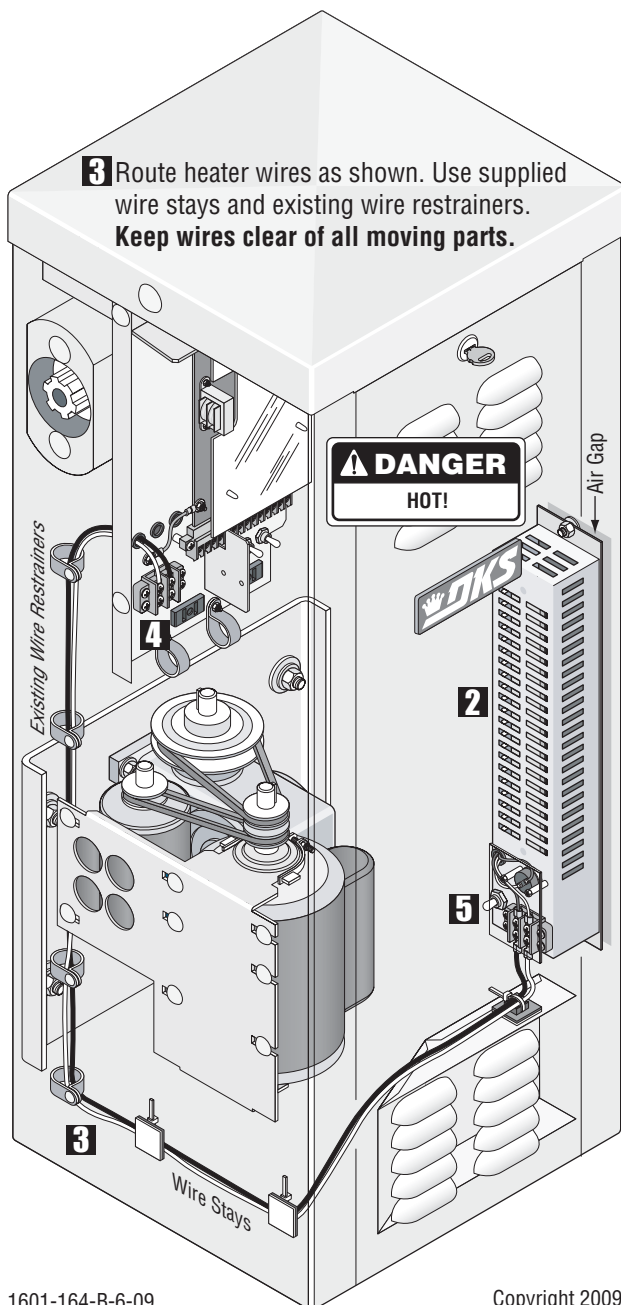


- 2 Mount heater with 2 lock nuts. Place the 2 supplied washers between the operator wall and the heater to create an air gap.

CAUTION: Heat will be transferred to the outside wall of the operator if **NO** air gap exists between the heater and the inside wall of the operator.

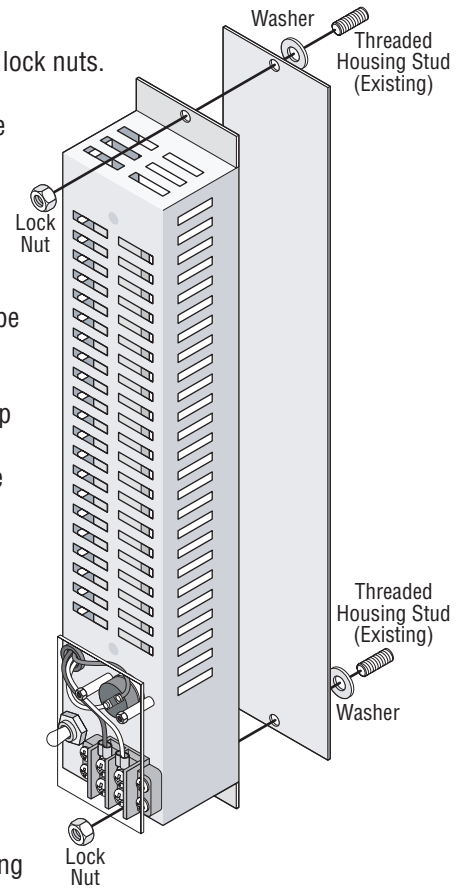

- 4 Connect the heater power wires according to operator model type.

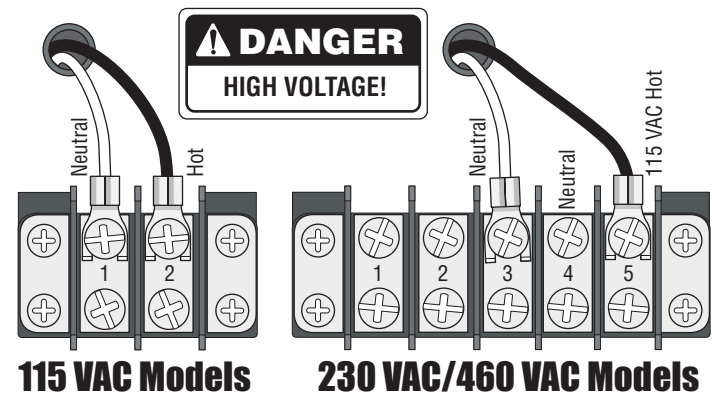

- 5 Heater switch settings.



AUTO - Normal setting. Automatically turns the heater **ON** when the temperature drops below 40°F inside the housing, and turns the heater **OFF** when the temperature rises above 40°F inside the housing.

OFF - Turns the heater off.

ON - Turns the heater on continuously. The heater will become **VERY HOT** when running continuously.

DKS
DOOR KING, INC.
120 Glasgow Avenue
Inglewood, California 90301 U.S.A.