



6002-140 Filter Kit Instructions

- 1) Disconnect the wires from the terminals in the junction box located on the actuator.
- 2) Remove the junction box.
- 3) Install the 6002-140 junction box with filter.
- 4) Connect the wires as shown in the diagram below.

